

de Installationsanleitung

en Installation Instructions

fr Instructions d'installation

it Istruzioni di montaggio

nl Installatie-aanwijzing

zh 安装说明书

es Instrucciones de montaje

pt Instruções de montagem

sv Installationsanvisning

fi Asennusohje

da Installationsvejledning

el Οδηγίες Εγκατάστασης



sk Návod na montáž

cs Montážní list

pl Instrukcja montażu


hu Telepítési leírás

RAA...

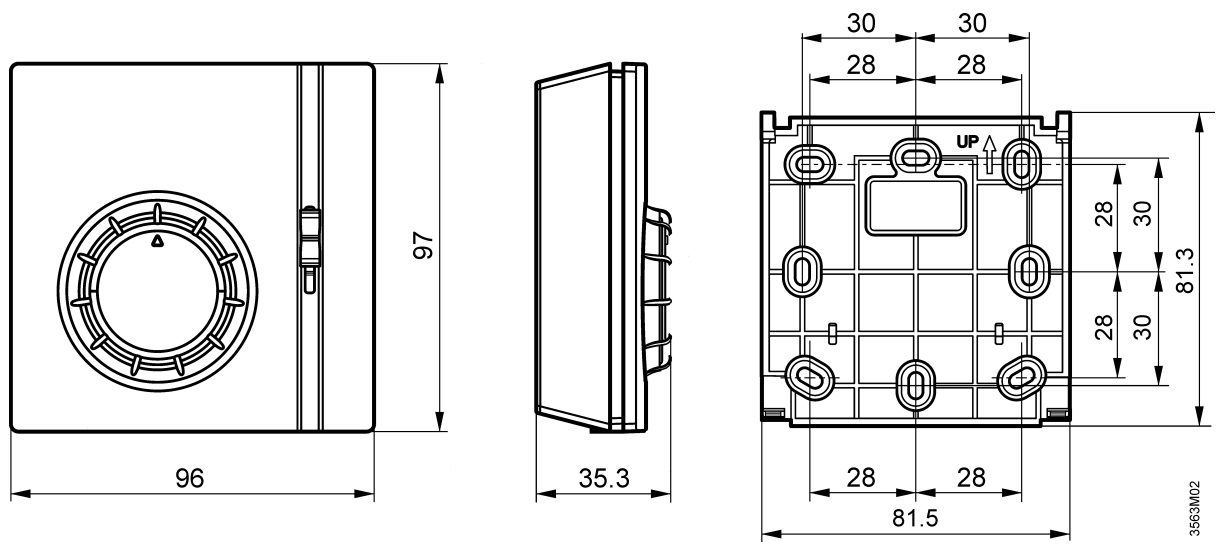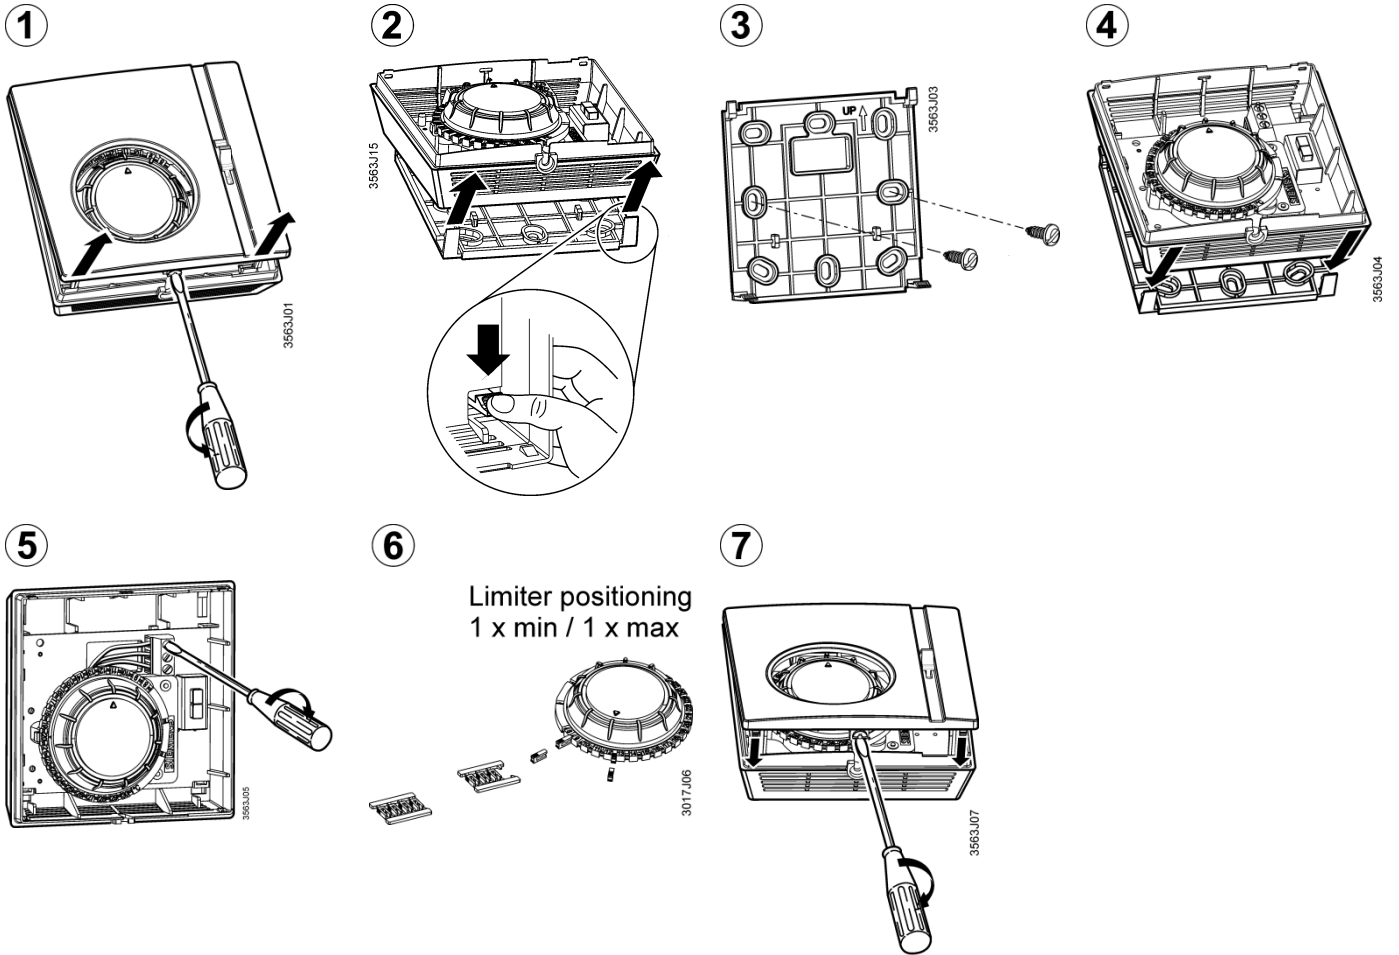


Dimensions in mm

RAA11 / RAA21

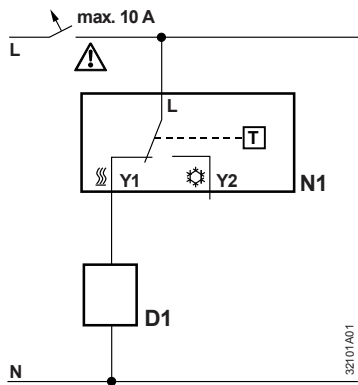


RAA11 / RAA21 - Heating mode

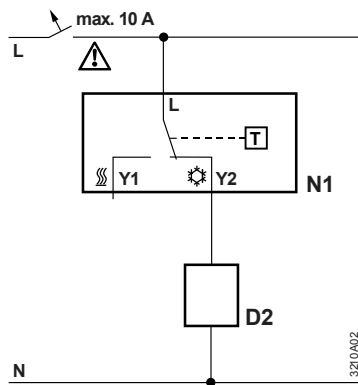


RAA11 / RAA21 - Cooling mode

- D1 Zone valve or thermal valve for heating
- D2 Zone valve or thermal valve for cooling
- L Switching voltage
AC 24...250V
- N1 Room thermostat
- Y1 Control output
"Heating", AC 24...250V
- Y2 Control output
"Cooling", AC 24...250V
- N Neutral
- T Thermostat element
(gas-filled diaphragm)

RAA31

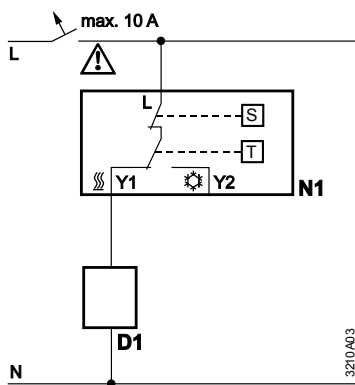


RAA31 - Heating mode

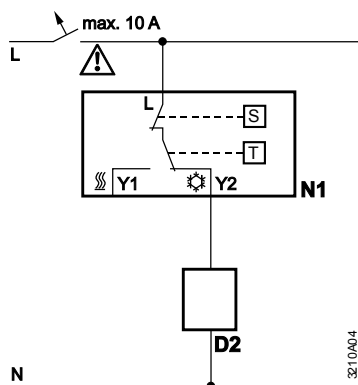

RAA31 - Cooling mode

- D1 Zone valve or thermal valve for heating
- D2 Zone valve or thermal valve for cooling
- L Switching voltage
AC 24...250V
- N1 Room thermostat
- S ON/OFF switch
- Y1 Control output
"Heating", AC 24...250V
- Y2 Control output
"Cooling", AC 24...250V
- N Neutral
- T Thermostat element
(gas-filled diaphragm)

RAA41

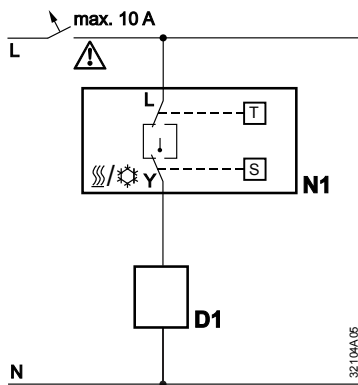

- D1 Zone valve or thermal valve for heating
- L Switching voltage
AC 24...250V
- N1 Room thermostat
- S Selector for Heating / OFF / Cooling
- Y Control output
"Heating", AC 24...250V
- T Thermostat element
(gas-filled diaphragm)