


A150

NOTICE DE MONTAGE
ASSEMBLING INSTRUCTIONS
MONTAGEANLEITUNG
ISTRUZIONI DI MONTAGGIO
INSTRUCOES DE MONTAJE
UPUTE ZA MONTAZU
MONTAJ TALIMATI

1/12

AVANT DE COMMENCER, SE REPORTERAUX CONSEILS DE MONTAGE EN ANNEXE
BEFORE STARTING, REFER TO THE ASSEMBLING ADVICE IN ANNEX
VOR DER MONTAGE, BEILIEGENDE ANWEISUNGEN BEFOLGEN
PRIMA DI COMINCIARE LEGGETE LE IS TRUZIONI DI MONTAGGIO
ANTES DE COMENCAR, CONSULTE OS CONSELHOS DE MONTAGEM EM ANEXO
ANTES DE EMPEZAR CONSULTE LOS CONSEJOS PARA EL MONTAJE
PRIJE MONTIRANJA OVOG ARTIKLA, MOLIMO PROU CITE PRILO ZENE UPUTE ZA MONTAZU
BASLAMADAN ONCE, EKTEKI MONTAL TALIMATLARINI INCELEYINIZ

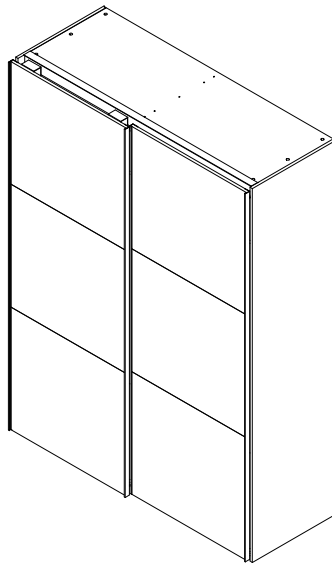

CAJA 1/3	43kg	2060x625x60mm
CAJA 2/3	26kg	1530x560x50mm
CAJA 3/3	31kg	870x680x100mm





MUEBLE MONTADO	2000x1500x615mm
----------------	-----------------

- SERIE ONE -
- ARMARIO 2 PUERTAS CORREDERAS -
- 200 x 150 x 62 -


A150

NOTICE DE MONTAGE
ASSEMBLING INSTRUCTIONS
MONTAGEANLEITUNG
ISTRUZIONI DI MONTAGGIO
INSTRUCOES DE MONTAJE
UPUTE ZA MONTAZU
MONTAJ TALIMATI


2/12

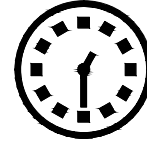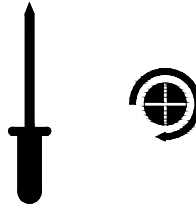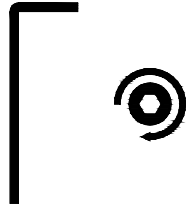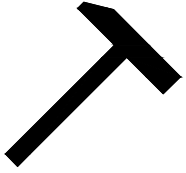

1:30 h.

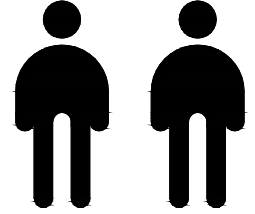





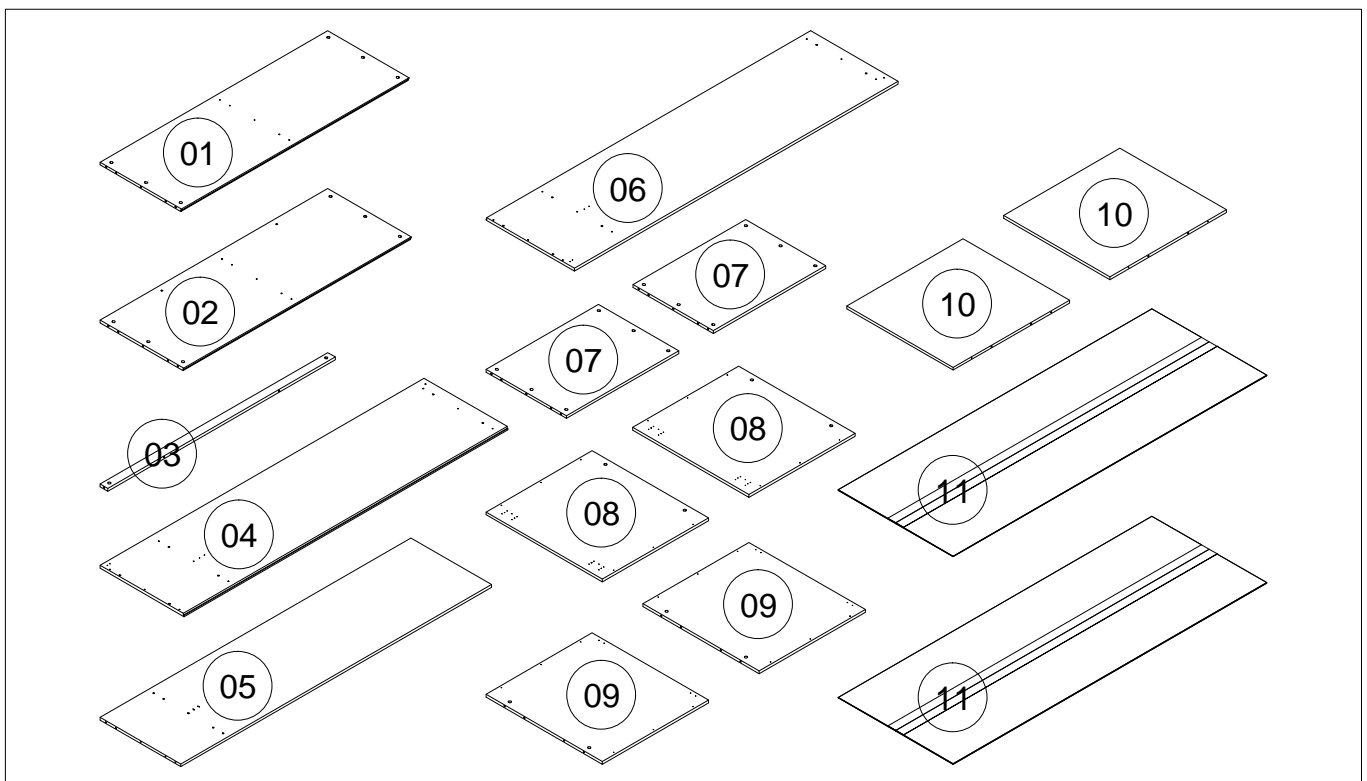























01	1468 x 525 x 16 - x1	02	1468 x 539 x 16 - x1
03	1468 x 50 x 16 - x1	04	2000 x 542 x 16 - x1
05	1916 x 520 x 16 - x1	06	2000 x 570 x 16 - x1
07	726 x 518 x 16 - x2	08	655 x 751 x 16 - x2
09	655 x 751 x 16 - x2	10	751 x 657 x 16 - x2
11	1934 x 371 x 3 - x4	12	



A150

NOTICE DE MONTAGE
 ASSEMBLING INSTRUCTIONS
 MONTAGEANLEITUNG
 ISTRUZIONI DI MONTAGGIO
 INSTRUCOES DE MONTAJE
 UPUTE ZA MONTAZU
 MONTAJ TALIMATI

3/12


A	 8 x 30	x27	B		x28
C		x34	D	 5 x 50	x10
E		x32	F	 4 x 16	x80
G	 4 x 25	x04	H	 EURO	x28
I		x04	J		x02
K		x06	L		x02
M		x01	N		x02
O		x02	P		x02
Q		x05	R		x03
S		x02	T		x01
U		x01	W		x02
X		x02	Y		x02
Z		x01	AB		x01
AC		x01	AD		x03



A150




NOTICE DE MONTAGE
ASSEMBLING INSTRUCTIONS
MONTAGEANLEITUNG
ISTRUZIONI DI MONTAGGIO
INSTRUCOES DE MONTAJE
UPUTE ZA MONTAZU
MONTAJ TALIMATI



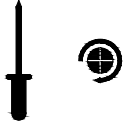
4/12

1



G  x04
F  x08

B  x20
I  x04
L  x02

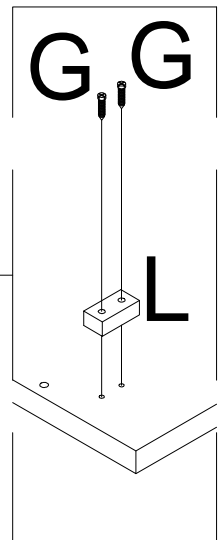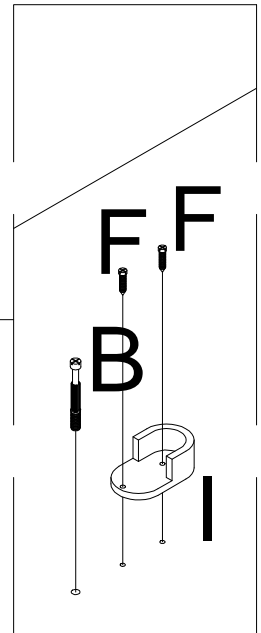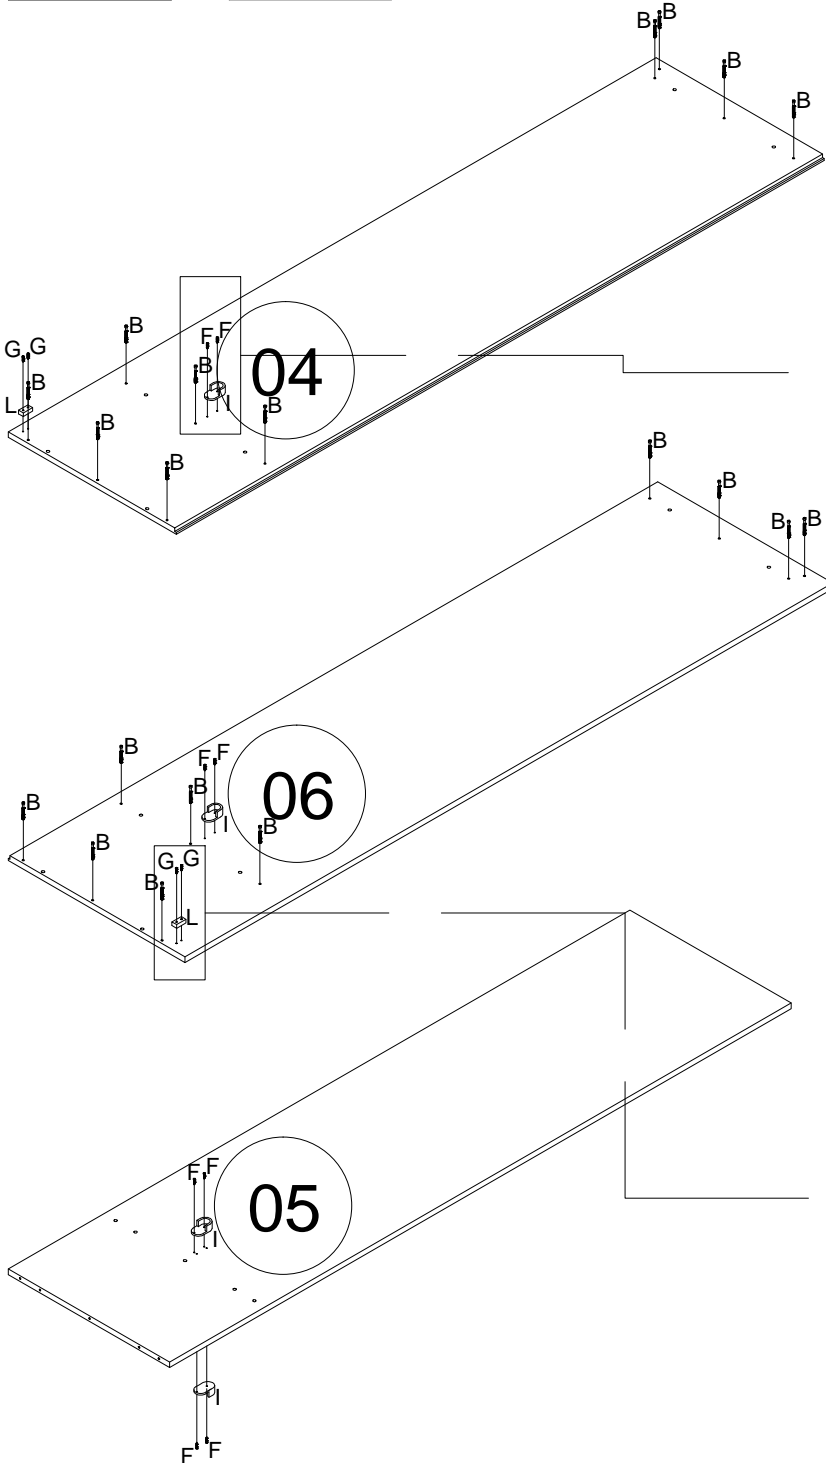



A150

NOTICE DE MONTAGE
ASSEMBLING INSTRUCTIONS
MONTAGEANLEITUNG
ISTRUZIONI DI MONTAGGIO
INSTRUCOES DE MONTAJE
UPUTE ZA MONTAZU
MONTAJ TALIMATI


5/12








2

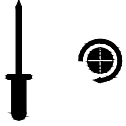

A  x26

B  x08

C  x26

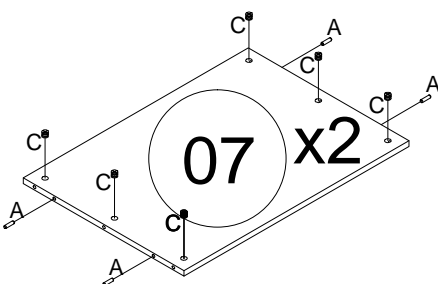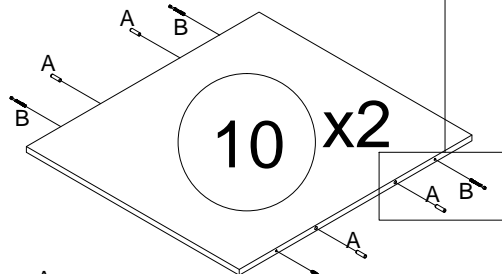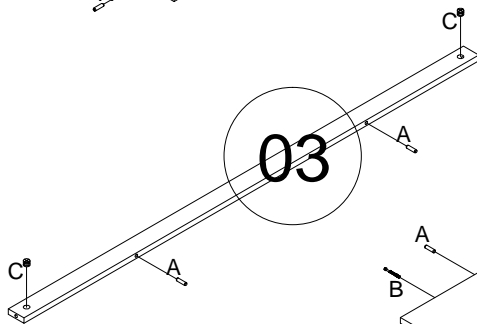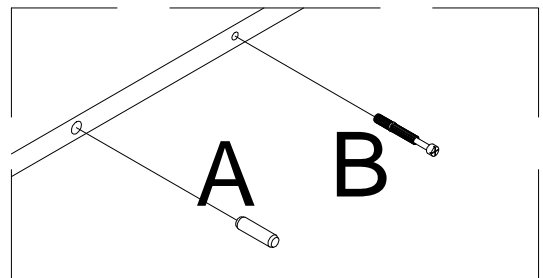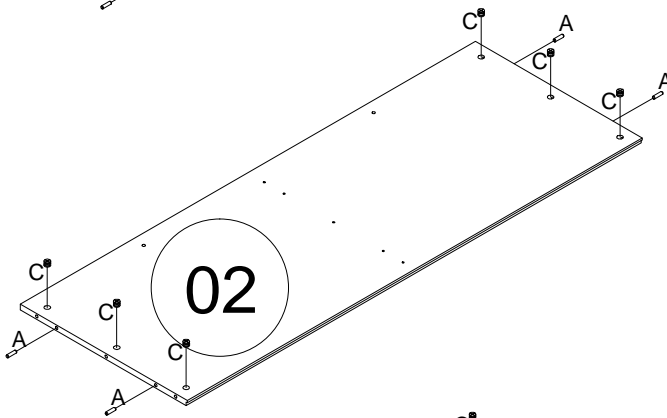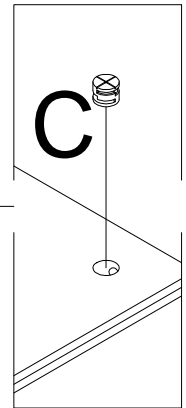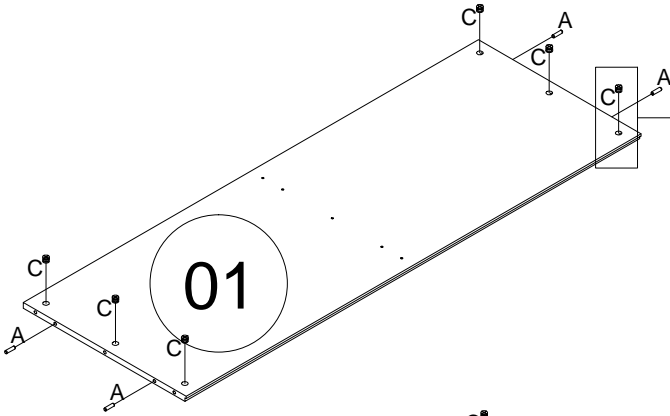



A150




NOTICE DE MONTAGE
ASSEMBLING INSTRUCTIONS
MONTAGEANLEITUNG
ISTRUZIONI DI MONTAGGIO
INSTRUCOES DE MONTAJE
UPUTE ZA MONTAZU
MONTAJ TALIMATI

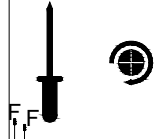


6/12










3



X  x02

U  x01
T  x01
W  x02

Y  x02
F  x24
C  x08

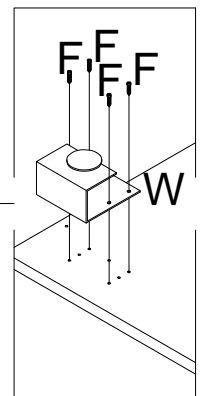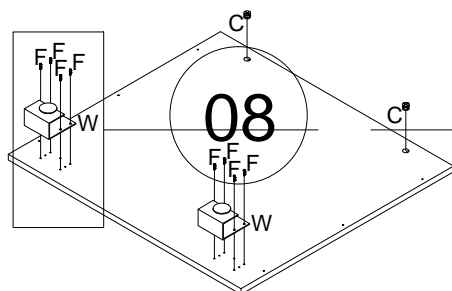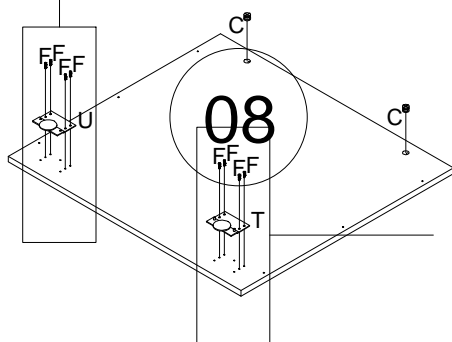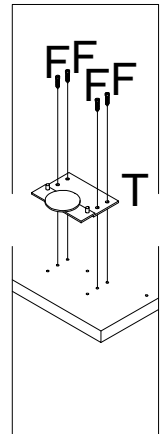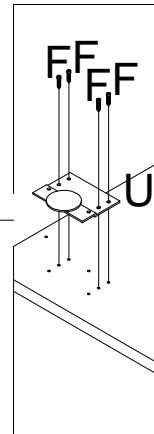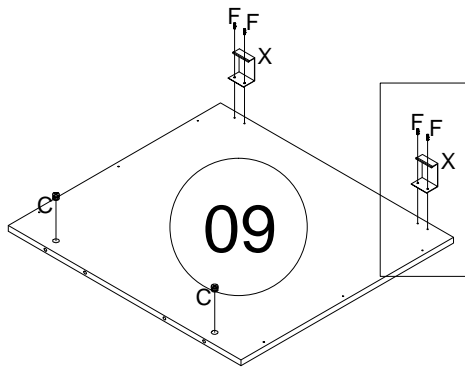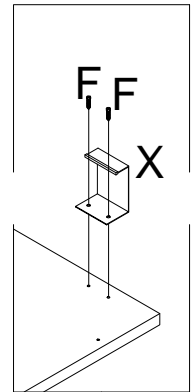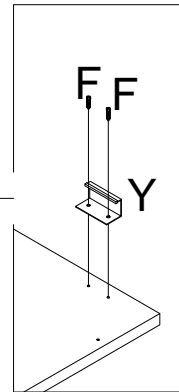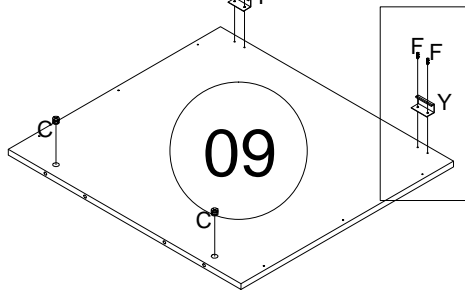


A150

NOTICE DE MONTAGE
ASSEMBLING INSTRUCTIONS
MONTAGEANLEITUNG
ISTRUZIONI DI MONTAGGIO
INSTRUCOES DE MONTAJE
UPUTE ZA MONTAZU
MONTAJ TALIMATI



7/12

4



D x10

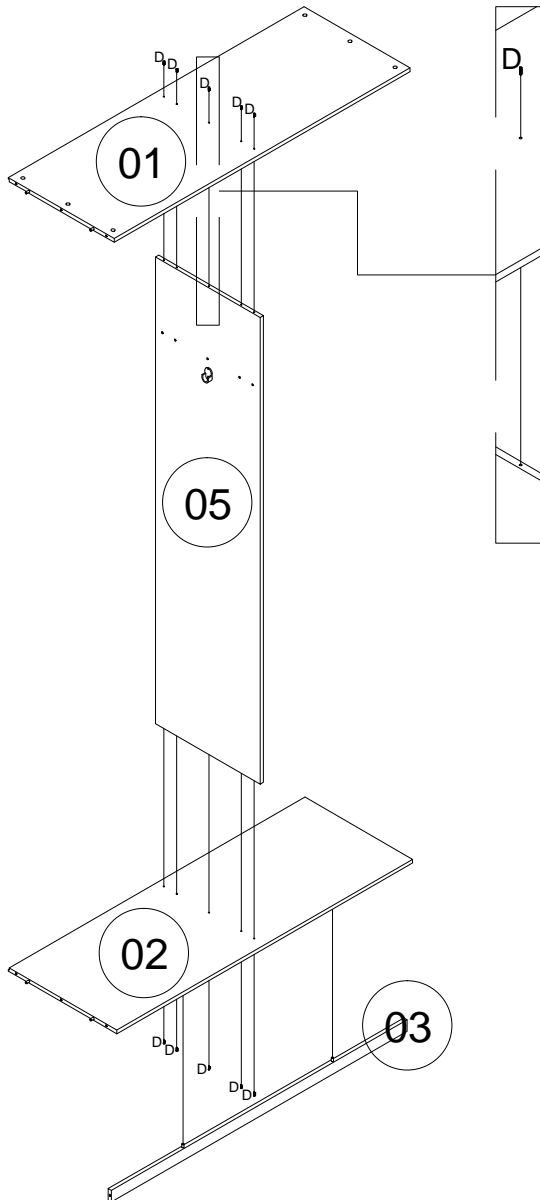

5

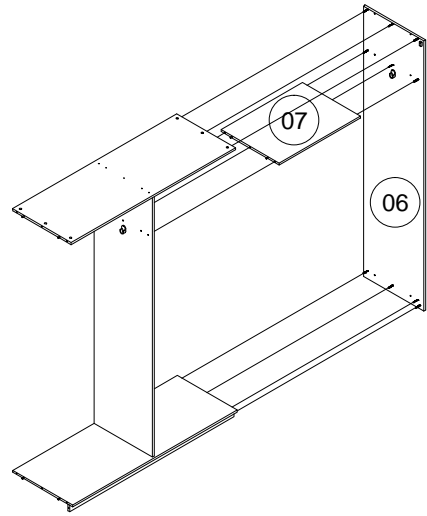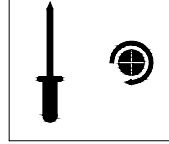

6

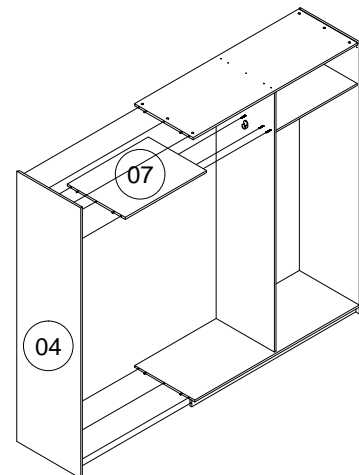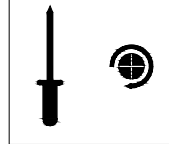



A150

NOTICE DE MONTAGE
ASSEMBLING INSTRUCTIONS
MONTAGEANLEITUNG
ISTRUZIONI DI MONTAGGIO
INSTRUÇÕES DE MONTAJE
UPUTE ZA MONTAZU
MONTAJ TALIMATI

8/12



7

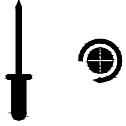

E  x22

F  x05

Q  x05

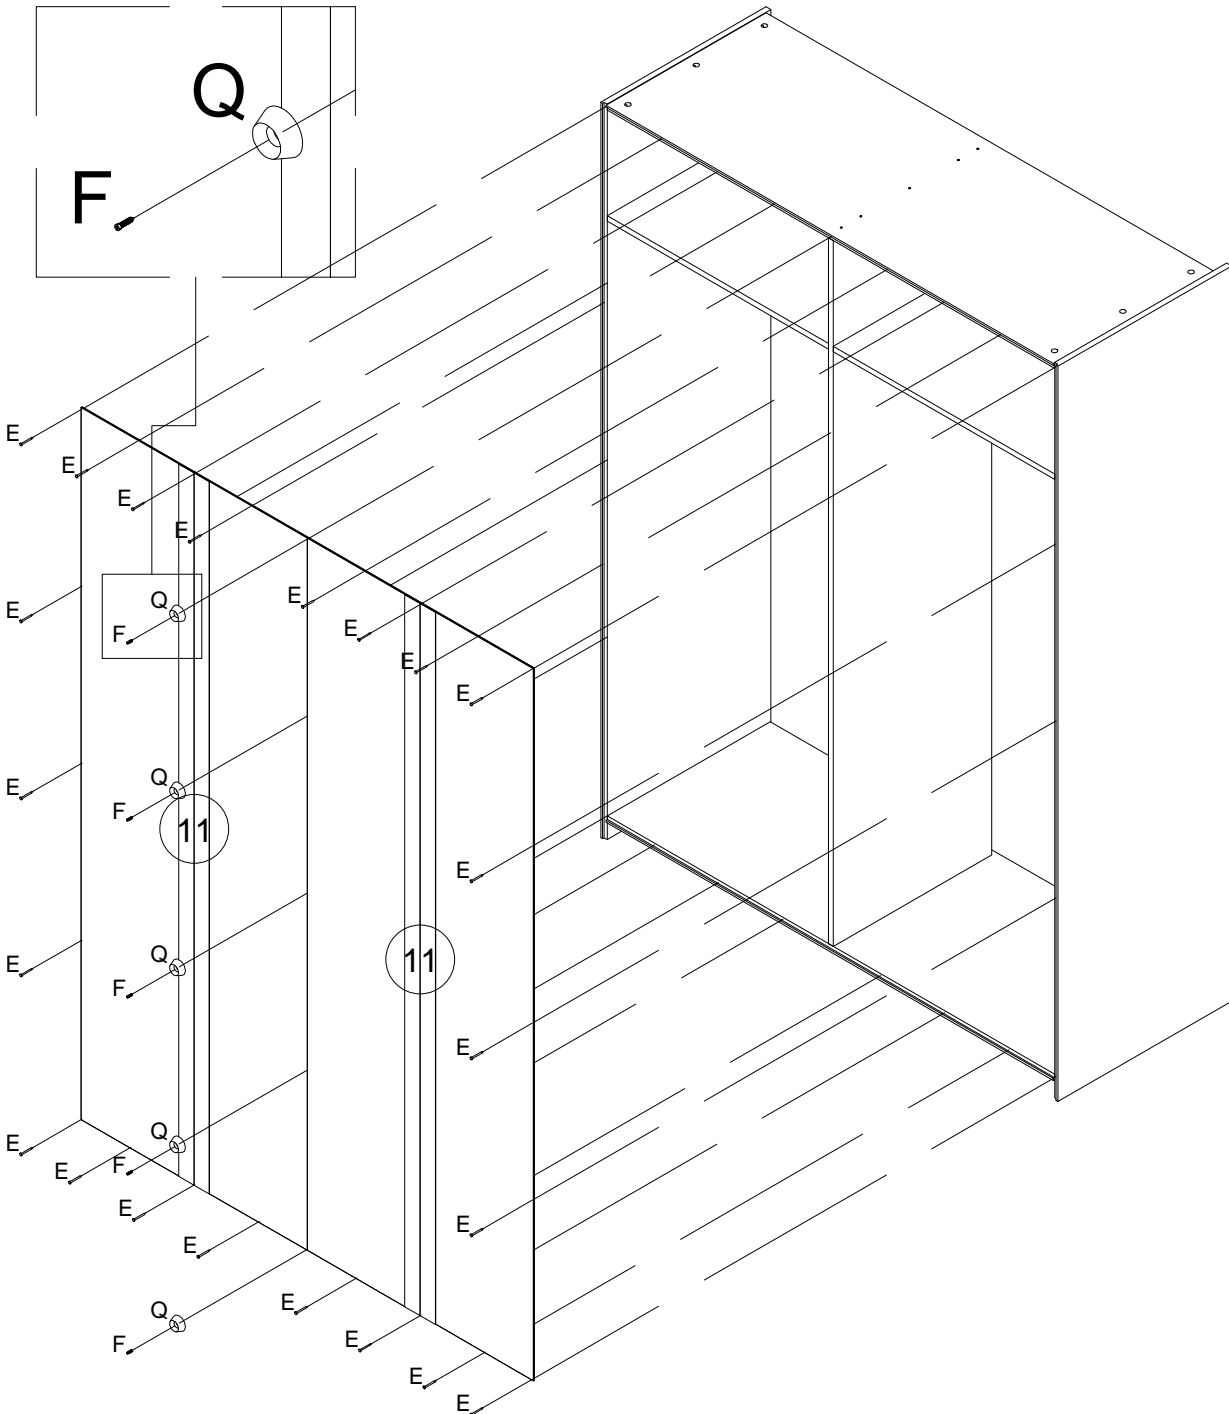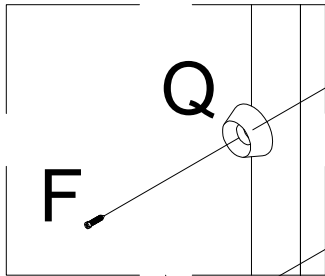


A150

NOTICE DE MONTAGE
ASSEMBLING INSTRUCTIONS
MONTAGEANLEITUNG
ISTRUZIONI DI MONTAGGIO
INSTRUCOES DE MONTAJE
UPUTE ZA MONTAZU
MONTAJ TALIMATI


9/12

8

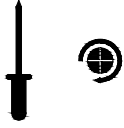

N x02
Z x01
AB x01

P x02
F x14
O x02


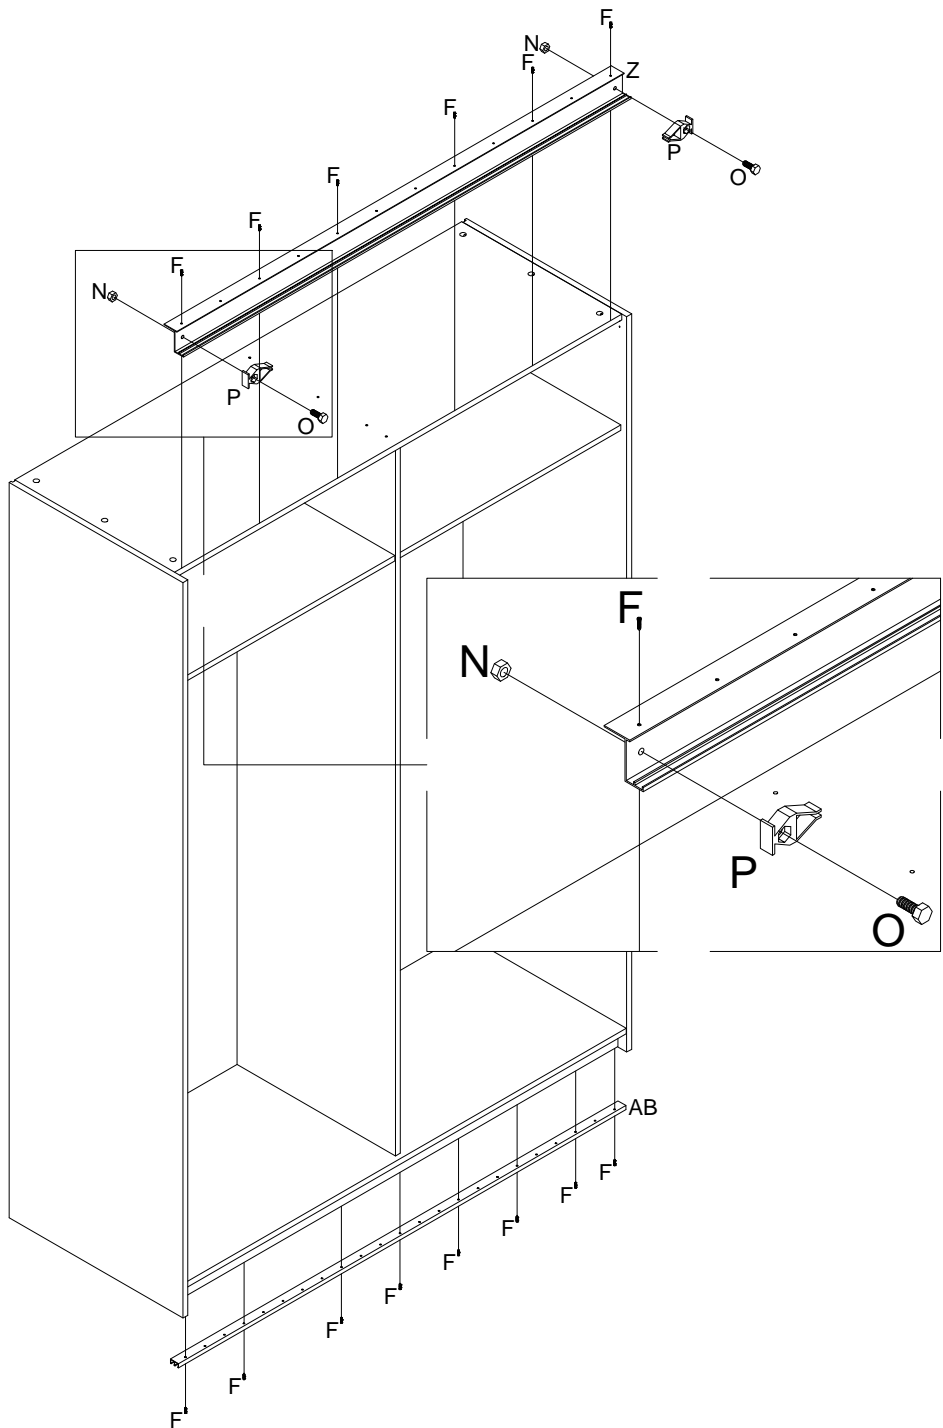


A150




NOTICE DE MONTAGE
ASSEMBLING INSTRUCTIONS
MONTAGEANLEITUNG
ISTRUZIONI DI MONTAGGIO
INSTRUÇÕES DE MONTAJE
UPUTE ZA MONTAZU
MONTAJ TALIMATI



10/12

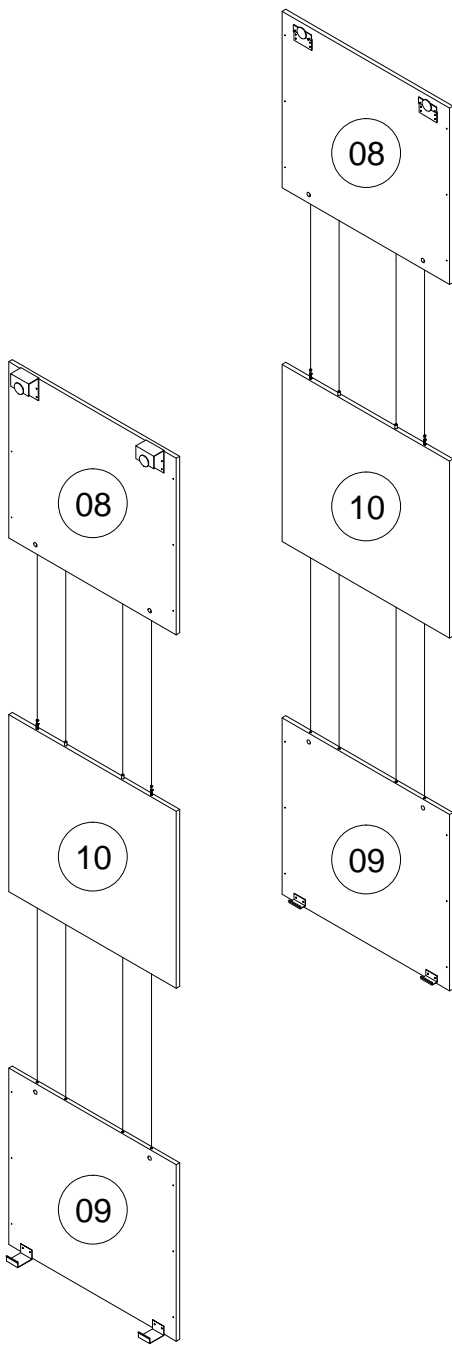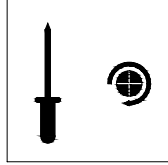9



10

F  x24
AD  x03
AC  x01

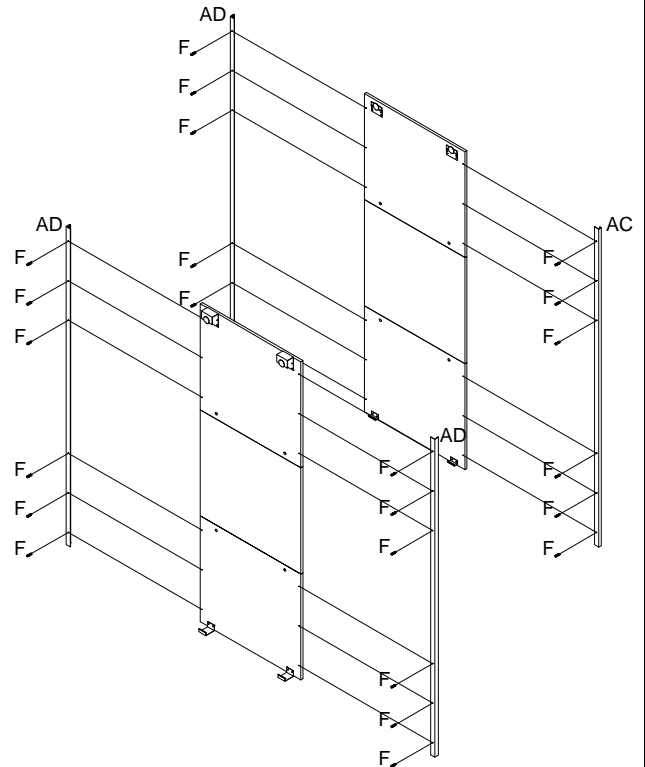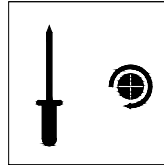


¡ATENCIÓN!
COMENZAR MONTAJE
POR EXTREMOS
EXTERIORES

A150

NOTICE DE MONTAGE
ASSEMBLING INSTRUCTIONS
MONTAGEANLEITUNG
ISTRUZIONI DI MONTAGGIO
INSTRUCOES DE MONTAJE
UPUTE ZA MONTAZU
MONTAJ TALIMATI

11/12

11

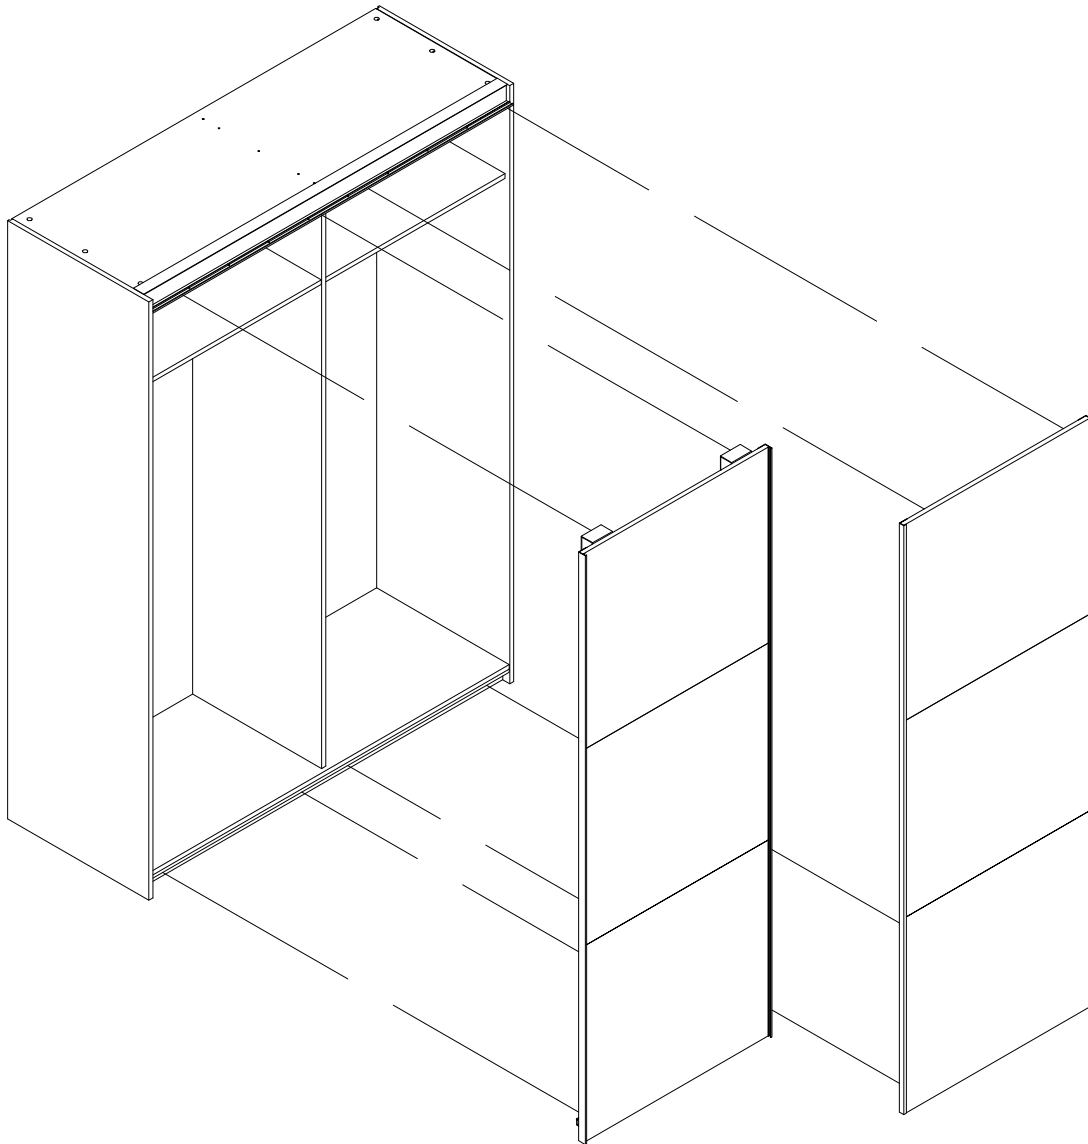

A150

NOTICE DE MONTAGE
ASSEMBLING INSTRUCTIONS
MONTAGEANLEITUNG
ISTRUZIONI DI MONTAGGIO
INSTRUCOES DE MONTAJE
UPUTE ZA MONTAZU
MONTAJ TALIMATI

12/12

12

